




Pt.30) Install: (1) 3ph 45' De Pole
Install: (1) 1ph Line Extension
Install: (1) 3ph Primary Riser
Install: (1) 15T Fuse
Pt.30-Pt.35) Install 55' of #1/0-AS oh Pri Conductor
Pt.30-Pt.40) Install 760" of #3/4-0-AL Urd 6"
Pt. 40) Install: (1) 3ph 45' De Pole
Install: (1) 3ph Primary Riser
Install: (1) Bladed Cutout w/ FI
Pt. 40 – Pt. 50) Install 350' of #3/1-0-AS OH Pri Conductor

Pt. 5) Install (1) Bladed Cutout w/ FI

Pt. 10) R/R: (1) 3ph Dbl De 35' Pole w/ (1) 3ph Dbl De 45' Pole


(1) 3ph Line Extension

(3) Existing Fuses w/ (3) 25T Fuses

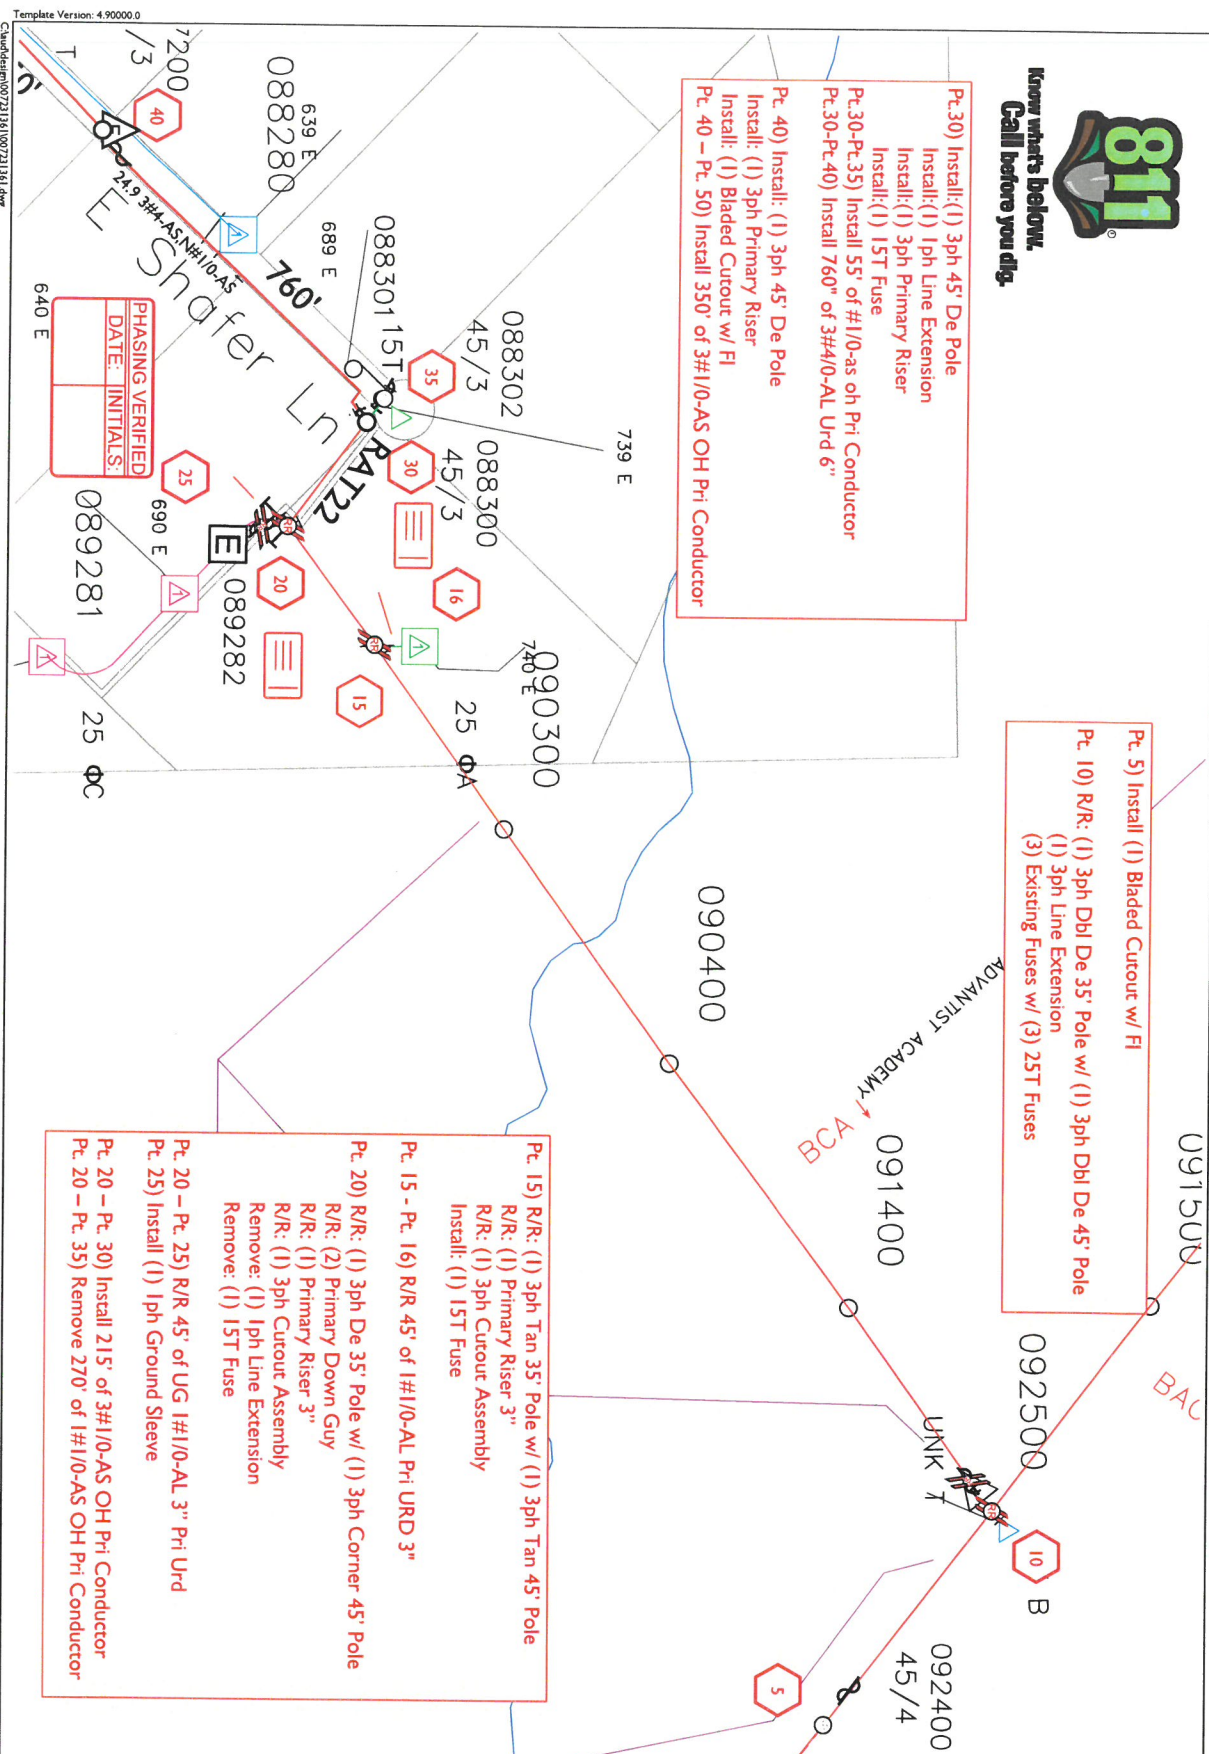

Foreman		Emp #	Job Start Date					
CC#	WO# / REQ#	Map String	Job Complete Date					
I1406	007231361	I1425023.0						
Customer : Canyonlands Customer Collections Address : 38.644995,-109.384881			Circuit RAT22	Post Jobs RQII Posted	☐ ☐ ☐	EST ID# P49407	Print Date 3/20/2025	Scale 1" = 200'

C:\msdcpint\007231361\007231361.dwg

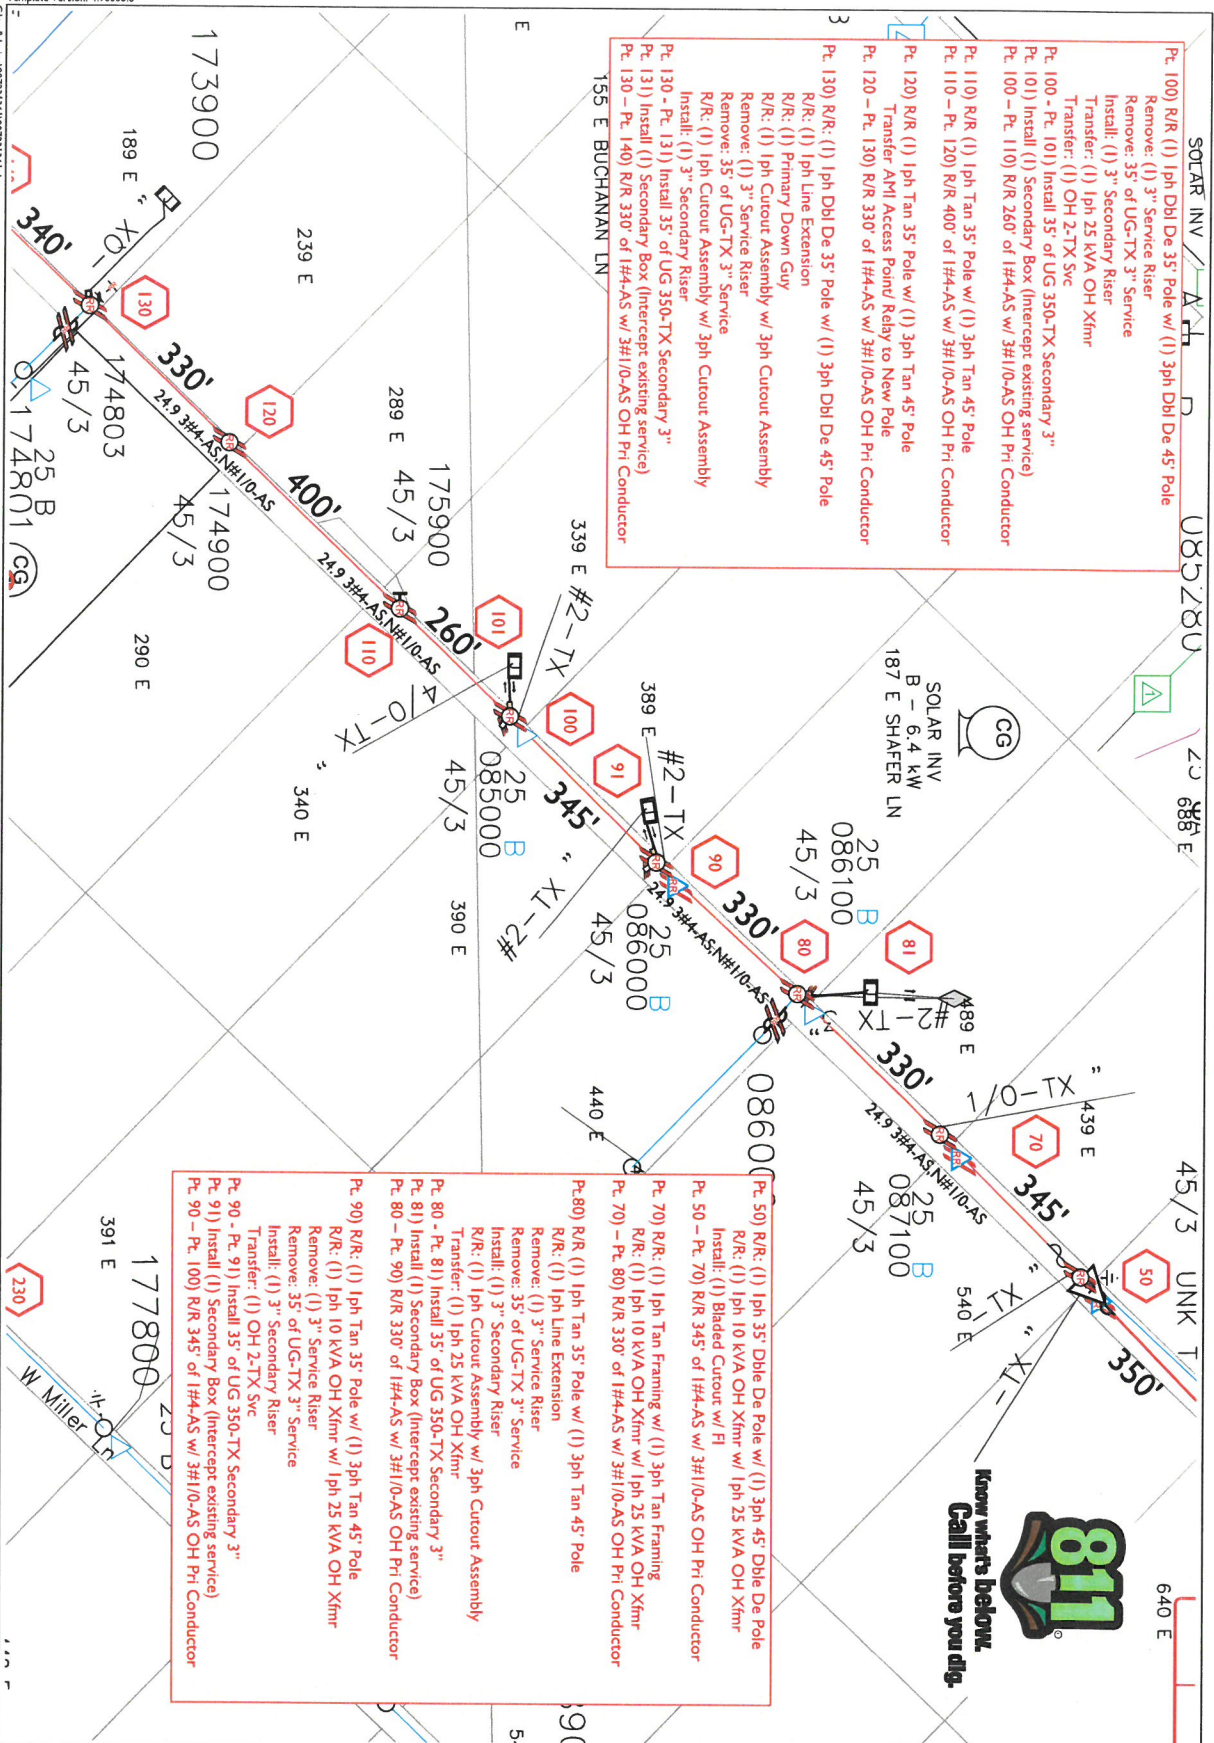

Foreman		Emp #	Job Start Date	 A BERNSHORE HATHAWAY ENERGY COMPANY	
CC#	WO# / REQ#	Map String	Job Complete Date	EST ID#	Print Date
11406	007231361	11425023.0		P49407	3/20/2025
Customer: Canyonlands Customer Collections			Circuit	Post Jobs	Scale
Address: 38.644995,-109.384881			RAT22	☐ RQII ☐ Posted	1" = 200'

